 


CAST REQUIRED:



Optional Lip Pad




DSLR Baseplate

Canon Set Screw
 Nikon Set Screw

Also Included:
 both Nikon and Canon set screw come with appropriate allen wrench

1


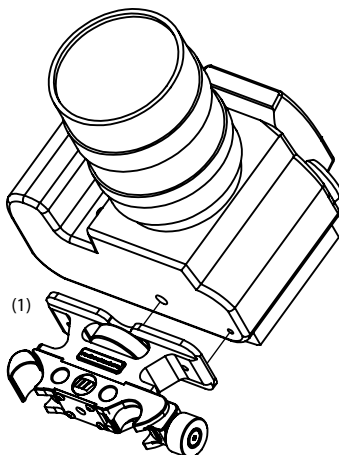


DSLR Baseplate / Camera Assembly
 (1) Attach baseplate to camera


OPTIONAL ASSEMBLY

(1b) Add Lip Pad and/or camera specific Set Screw to Baseplate. DO NOT remove center of Lip Pad until it is set on baseplate. Once placed, remove center and add Set Screw


OPTIONAL ASSEMBLY

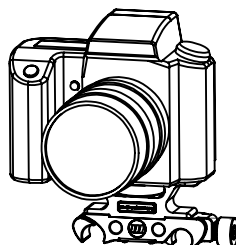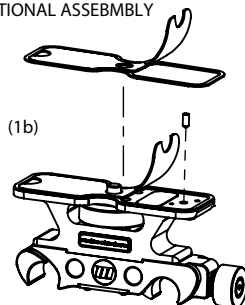

2

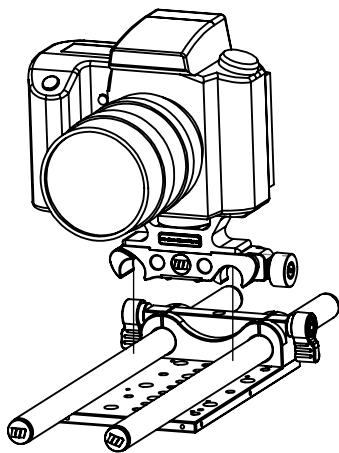

(2) Attach DSLR Baseplate / Camera assembly to 15mm rods.
 Tighten Knob on baseplate to secure assembly to rods
 Note: DSLR Tripod Plate and Iris Rods sold separately

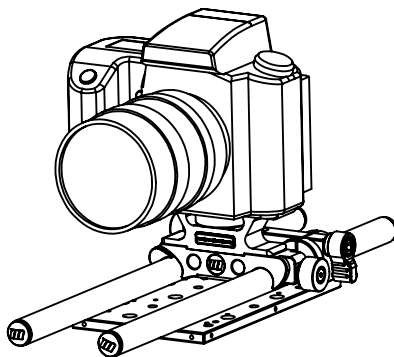

ASSEMBLY COMPLETE! NOW GO SHOOT!!



<http://start.redrockmicro.com>

create the cinema experience

Tutorials, forums, customer support