

 


Title: REMOTE HOLDER for the Canon dSLR Remotes
Scene: Bundles for the HandGrip and microMOUNT Attachments


CAST REQUIRED:



Front Cover




Canon Remote
(Not Included)

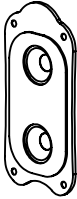


Back Cover



Lock Washer
Enclosure
Screws

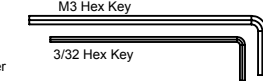


M3 Hex Key
3/32 Hex Key

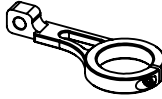

*Handgrip Bracket




Mounting Screw

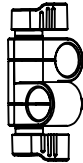

*microMount


* Handgrip bracket is available in the standard bundle. The microMount is sold separately

1 REMOTE ASSEMBLY WITH HANDGRIP ATTACHMENT

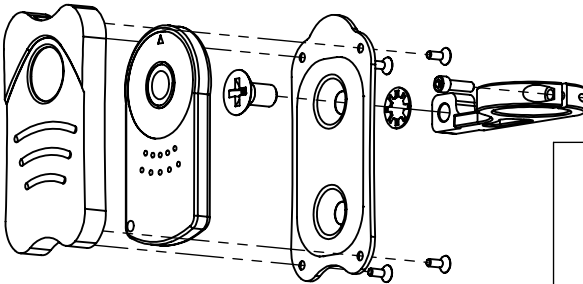

HELPFUL HINT:

Canon remotes use infrared. Make sure the line of sight between the remote and camera sensor is unobstructed

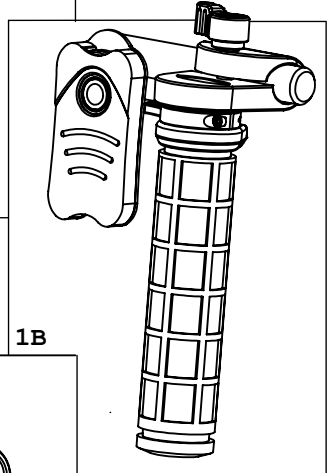



1B

1A

Remote Holder Assembly with Handgrip Attachment

- 1: Assemble remote holder around remote as illustrated above (NOTE: remote not included)
- 2: Screw attachment to remote holder
- 3: Attach Handgrip attachment to Handgrip (NOTE: Handgrip not included)

2 REMOTE ASSEMBLY WITH microMOUNT ATTACHMENT

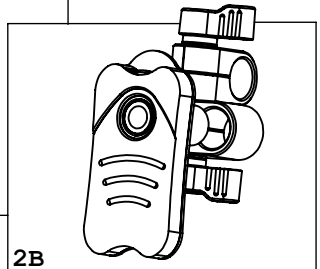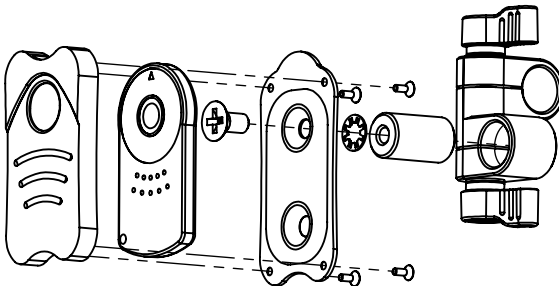

2B

2A

Remote Holder Assembly with microMount Attachment

- 1: Assemble remote holder around remote as illustrated above (NOTE: remote not included)
- 2: Screw microMount 15mm stub to remote holder
- 3: microMount can be attached to any 15mm rod on your dSLR kit

