



CAST REQUIRED:

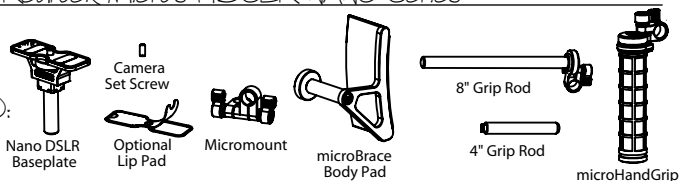


1

Change 2" rod to 4" rod for additional height

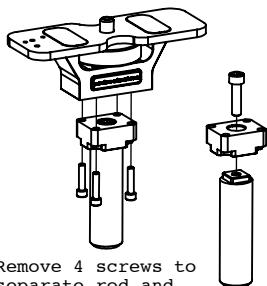

Remove 4 screws to separate rod and baseplate. Once separated, remove center screw to switch rods

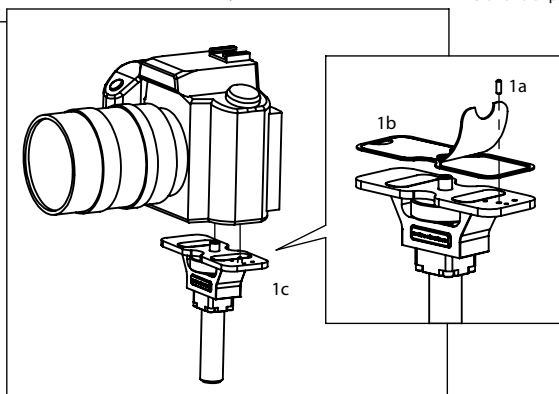

(1b) **OPTIONAL LIP PAD Assembly**
 Attach Optional Lip Pad by aligning pad with Baseplate. Once set, remove center

(1a) Attach camera specific set screw (Nikon or Canon) to Baseplate.

(1c) Attach Camera to Baseplate



2

(2a) Assemble microBrace by attaching it to 8" grip rod

(2b) Attach Camera / DSLR baseplate assembly to microMount

(2c) Attach micro-Mount / Camera assembly to 8" Grip Rod

(2d) Add HandGrip to 8" Grip Rod once Camera microMount assembly is attached

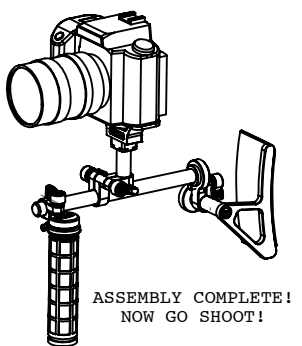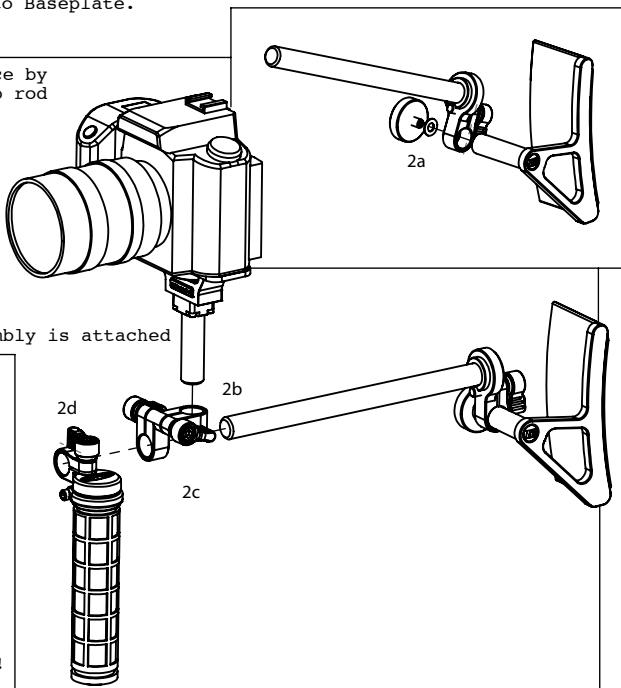

ASSEMBLY COMPLETE!
 NOW GO SHOOT!