




Company: REDROCK MICRO

Title: DSLR 2.0 Setup Guide


Scene: DSLR Cinema Bundle Assembly Guide

Pages: 1 of 1


Date: 12.16.09

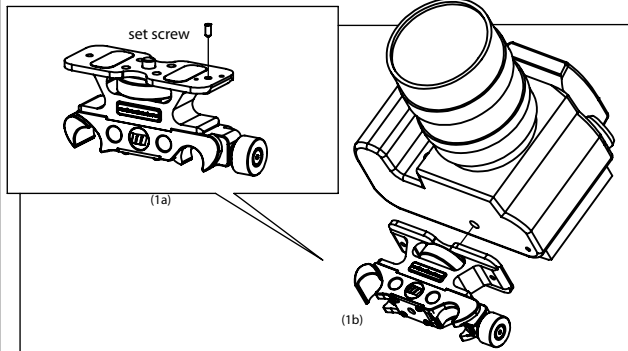


- (1a) Add Camera specific set screw to DSLR Baseplate
(1b) Attach Camera to DSLR Baseplate

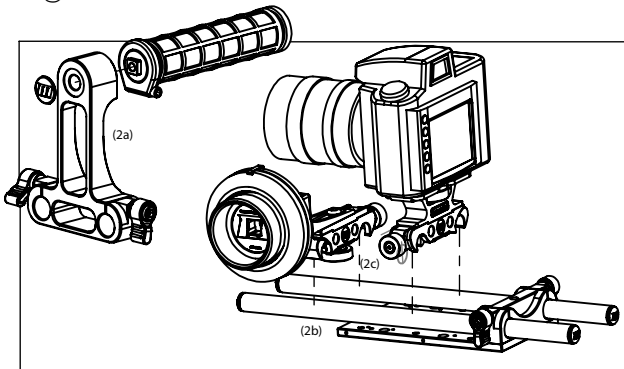


- (2a) Attach handgrip to microHandle
(2b) Attach 12in Rods to Tripod Plate.
(2c) Attach Camera / DSLR Baseplate assembly to micro FollowFocus to 12in rods

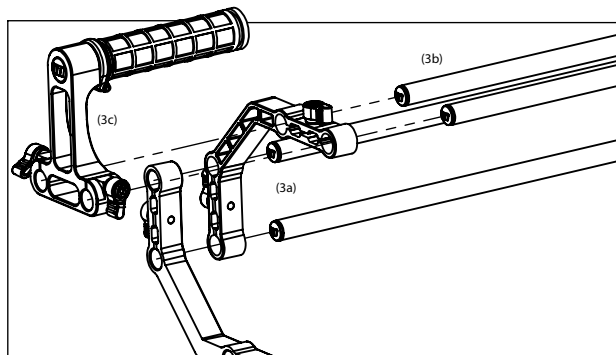


- (3a) Insert 12in rods into 15mm arm
(3b) Attach 2nd 15mm arm to rods as shown
(3c) Add 9in rods to 15mm arm and attach microHandle to 9in rods

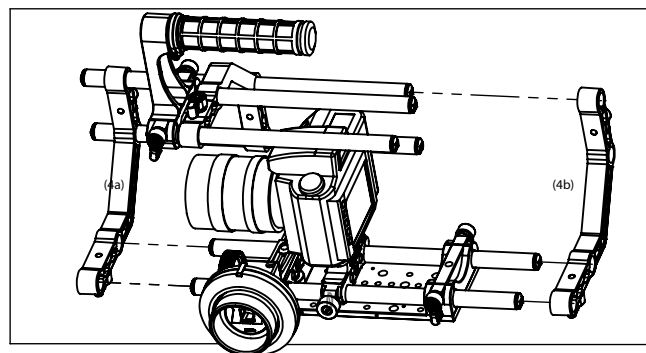

- (4a) Attach Cage Build assembly to 12in Baseplate rods
(4b) Add final 15mm arm

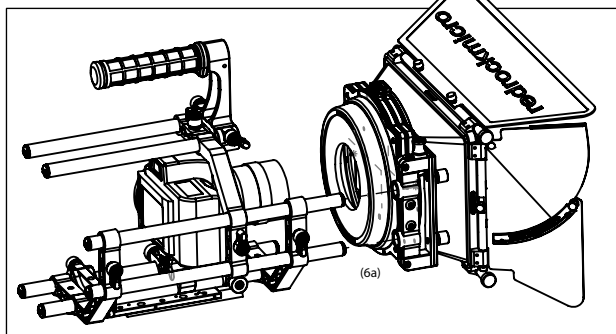


- (6a) Attach microMatteBox directly to 12in rods

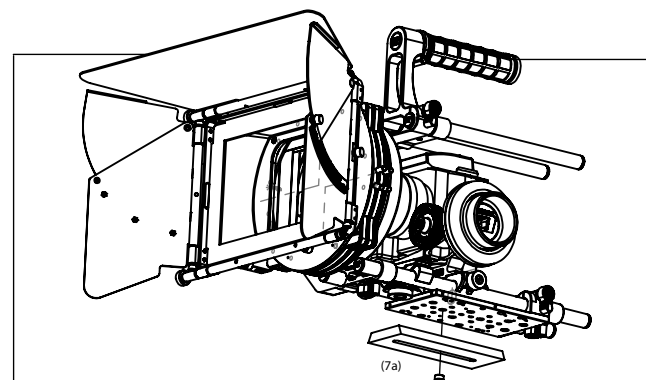


- (7a) Attach quick release plate from your tripod to bottom of tripod plate

CAST REQUIRED:


5/32" Hex
Wrench Included

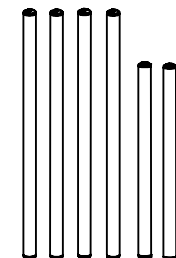


12 in
Rods
(2 Pair)
9 in
Rods
(1 Pair)



15mm
SwingArm
(x3)

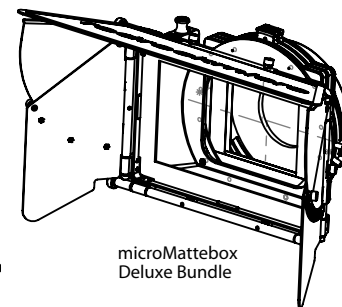


microMattebox
Deluxe Bundle

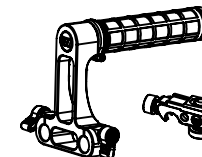


micro
Handle



microFollow Focus

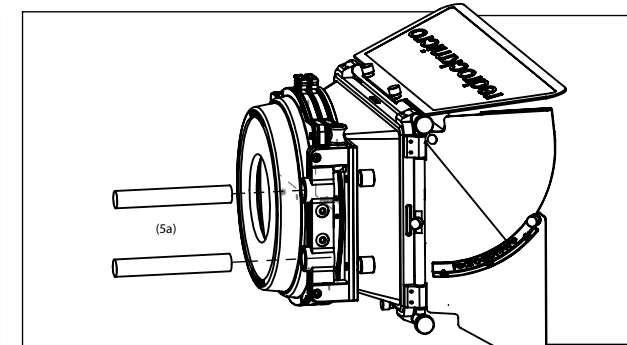

- (5a) Remove 4in rods from the microMatteBox assembly

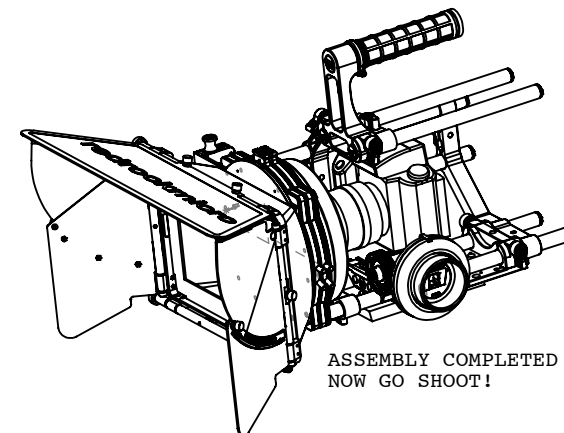

ASSEMBLY COMPLETED
NOW GO SHOOT!

create the cinema experience



<http://start.redrockmicro.com>
Tutorials, forums, customer support