



Company: REDROCK MICRO

Title: MAN CAM

Scene: DSLR Ultraport Bundle

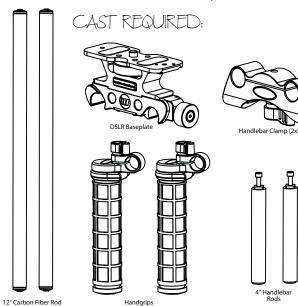


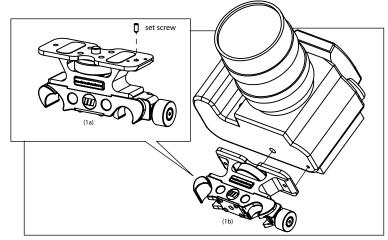

10.15.10


Date:

- 1 Steps needed for the Camera / DSLR Baseplate Assembly
 - la: Attach appropriate set screw for camera to baseplate. lb: Attach Camera to DSLR Baseplate $\,$

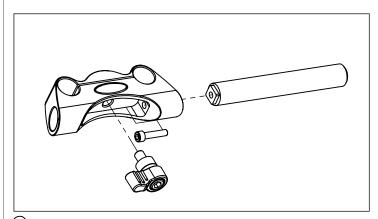


- 2 Steps needed to assemble the Handlebar CLamp:


 - Attach 4" Handlebar Rod to Handlebar Clamp. Thread Handlebar Clamp Tightening Screw Repeat this step for the 2nd handlebar clamp and rod

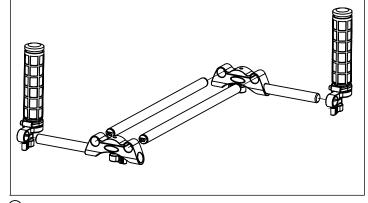

- 3 Steps needed for CF Rods / Grip Rods / Hand Grip Assembly:
 - 3a: Insert Carbon Fiber Rods into Handlebar Clamp
 3b: Add Handgrips to Carbon Fiber Rods

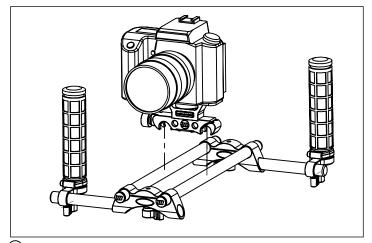

4 Attach Camera / DSLR Baseplate Assembly to CF Support Rods

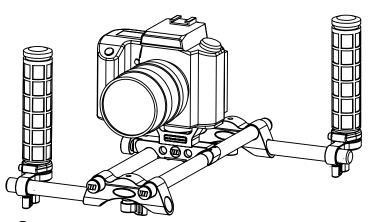

(5) ASSEMBLY COMPLETED! NOW GO SHOOT!